



SECTION F-F



NOTES:

- A. PROPORTIONAL CONTROL VALVE OPERATION
 1. WARNING DO NOT CONNECT VALVE COIL DIRECTLY TO BATTERY/POWER SUPPLY VOLTAGE.
 2. OPERATION TO BE PERFORMED WITH ONLY TWIN DISC CONTROL SYSTEMS OR MODULES.
- B. MANUAL DIRECTIONAL CONTROL VALVE OPERATION
 1. WITH MANUAL DIRECTIONAL CONTROL VALVE IN CENTERED POSITION, PUSH TO ENGAGE SECONDARY CLUTCH.
 2. WITH MANUAL DIRECTIONAL CONTROL VALVE IN CENTERED POSITION, PULL TO ENGAGE PRIMARY CLUTCH.
- C. MANUAL DIRECTIONAL CONTROL VALVE MODE SWITCH
 1. SWITCH IS NORMALLY CLOSED WHEN MANUAL DIRECTIONAL CONTROL VALVE IS IN THE CENTERED POSITION AND OPEN WHEN LEVER IS ACTUATED FROM CENTERED POSITION.
 2. CURRENT = 20 AMP MAX.
 3. FOR WIRING SCHEMATIC, REFER TO CONTROL MODULE DRAWING.

© APPLICABLE MODELS:
- MGX-61500SC-HL PER ASSEMBLY 1023610
- MGX-62000SC-HL PER ASSEMBLY 1026779

EQUIPMENT SHOWN:

- FREE STANDING HUB 1023810D
- GP VALVE WITH EC050 MODULE
- TRAILING PUMP
- 1016428AZ MOUNTING BRACKETS
- M1959AV HEAT EXCHANGER

1 INPUT GROUP REFERENCE PLANE

2 PTO ADAPTER MOUNTING FACE