


- 1 INPUT MOUNTING FACE AND REFERENCE PLANE
- 2 SUPPORT PLATE MOUNTING FACE

NOTES:

A. ALL POINTS AVAILABLE FOR TESTING ARE CODED .

**B. REFER TO MANUAL FOR RECOMMENDED OIL, CHECKING, AND MAINTENANCE PROCEDURES**

C. REPLACE INSTALLATION BOLTS (3) BEFORE OPERATING PTO  
SEE MANUAL FOR DETAILS


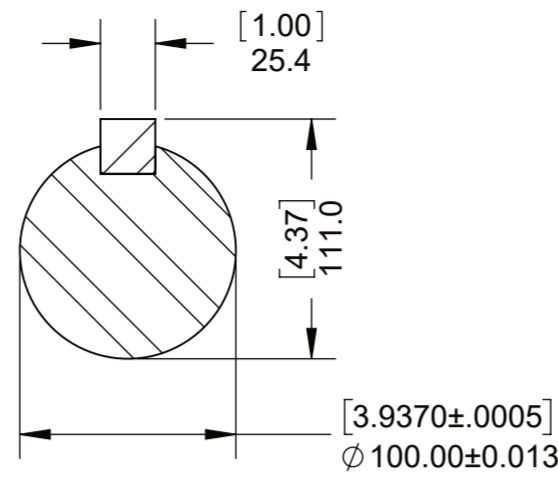


## SECTION A-A

VALVE ASSY (SHIPPED LOOSE)  
SEE INSTALLATION DRAWING 1032408

CONTROL ASSY (SHIPPED LOOSE)-  
SEE INSTALLATION DRAWING  
PX1037996 AND PX1039743

REMOTE MOUNT BRACKET (SHIPPED LOOSE)-  
SEE INSTALLATION DRAWING PX1037967.

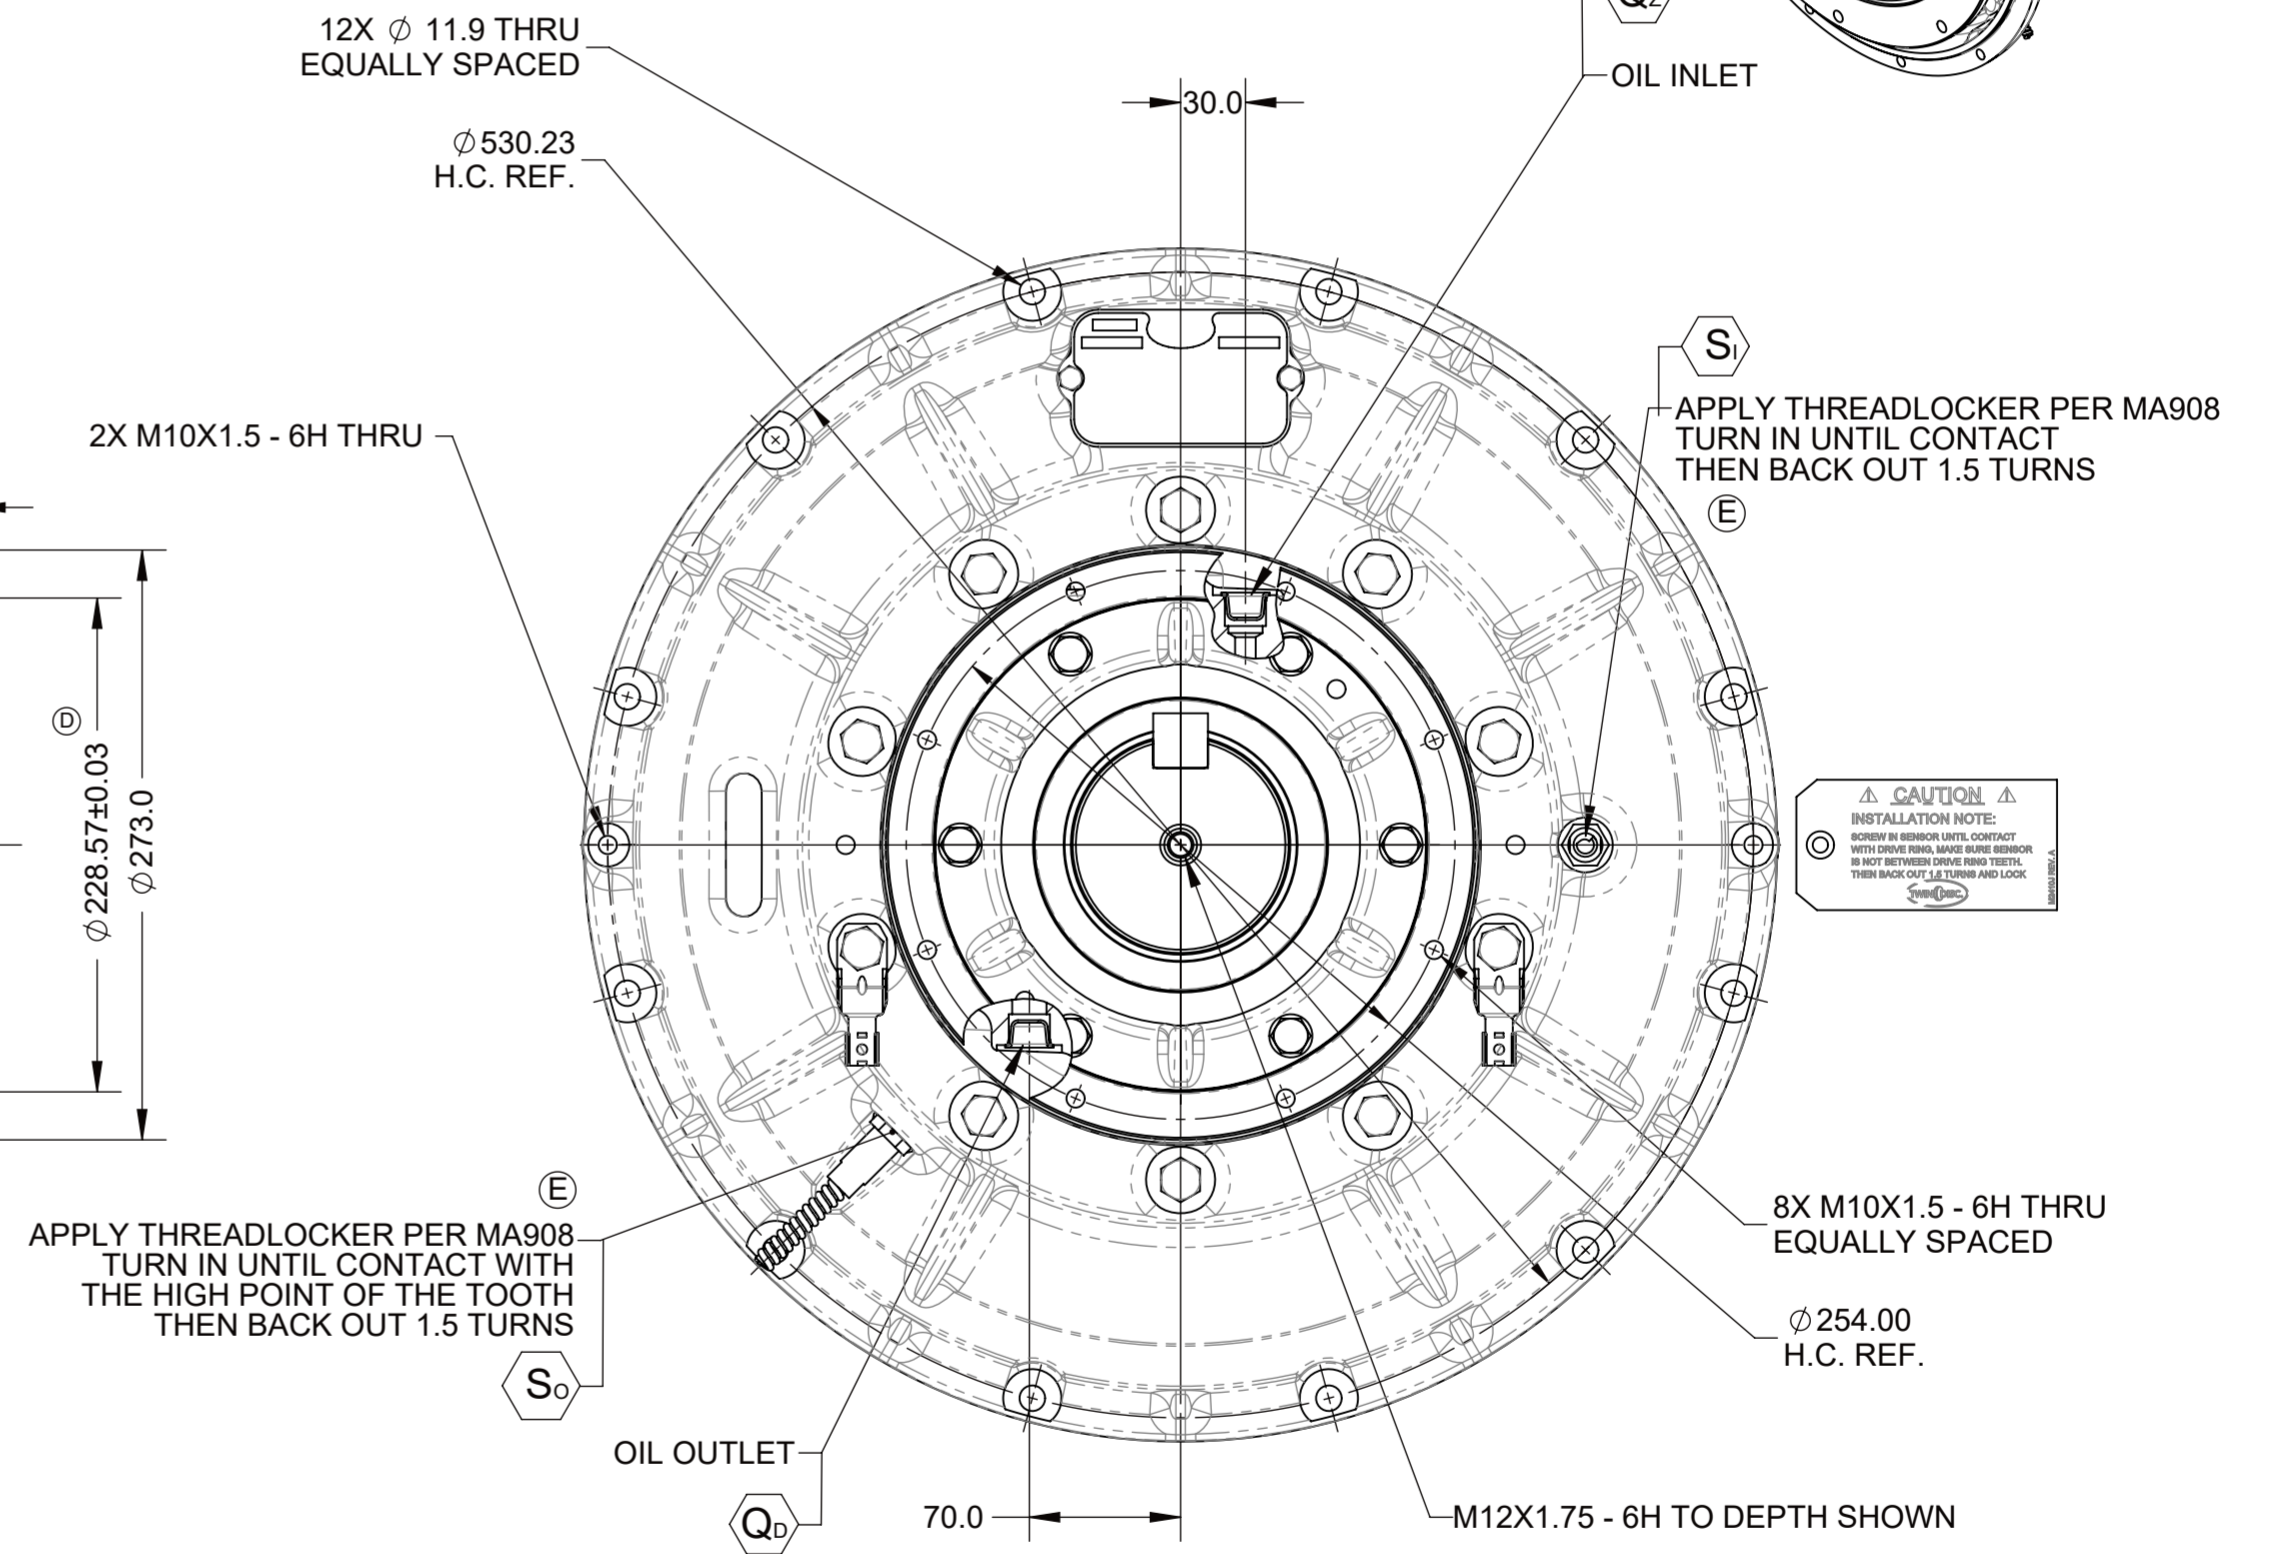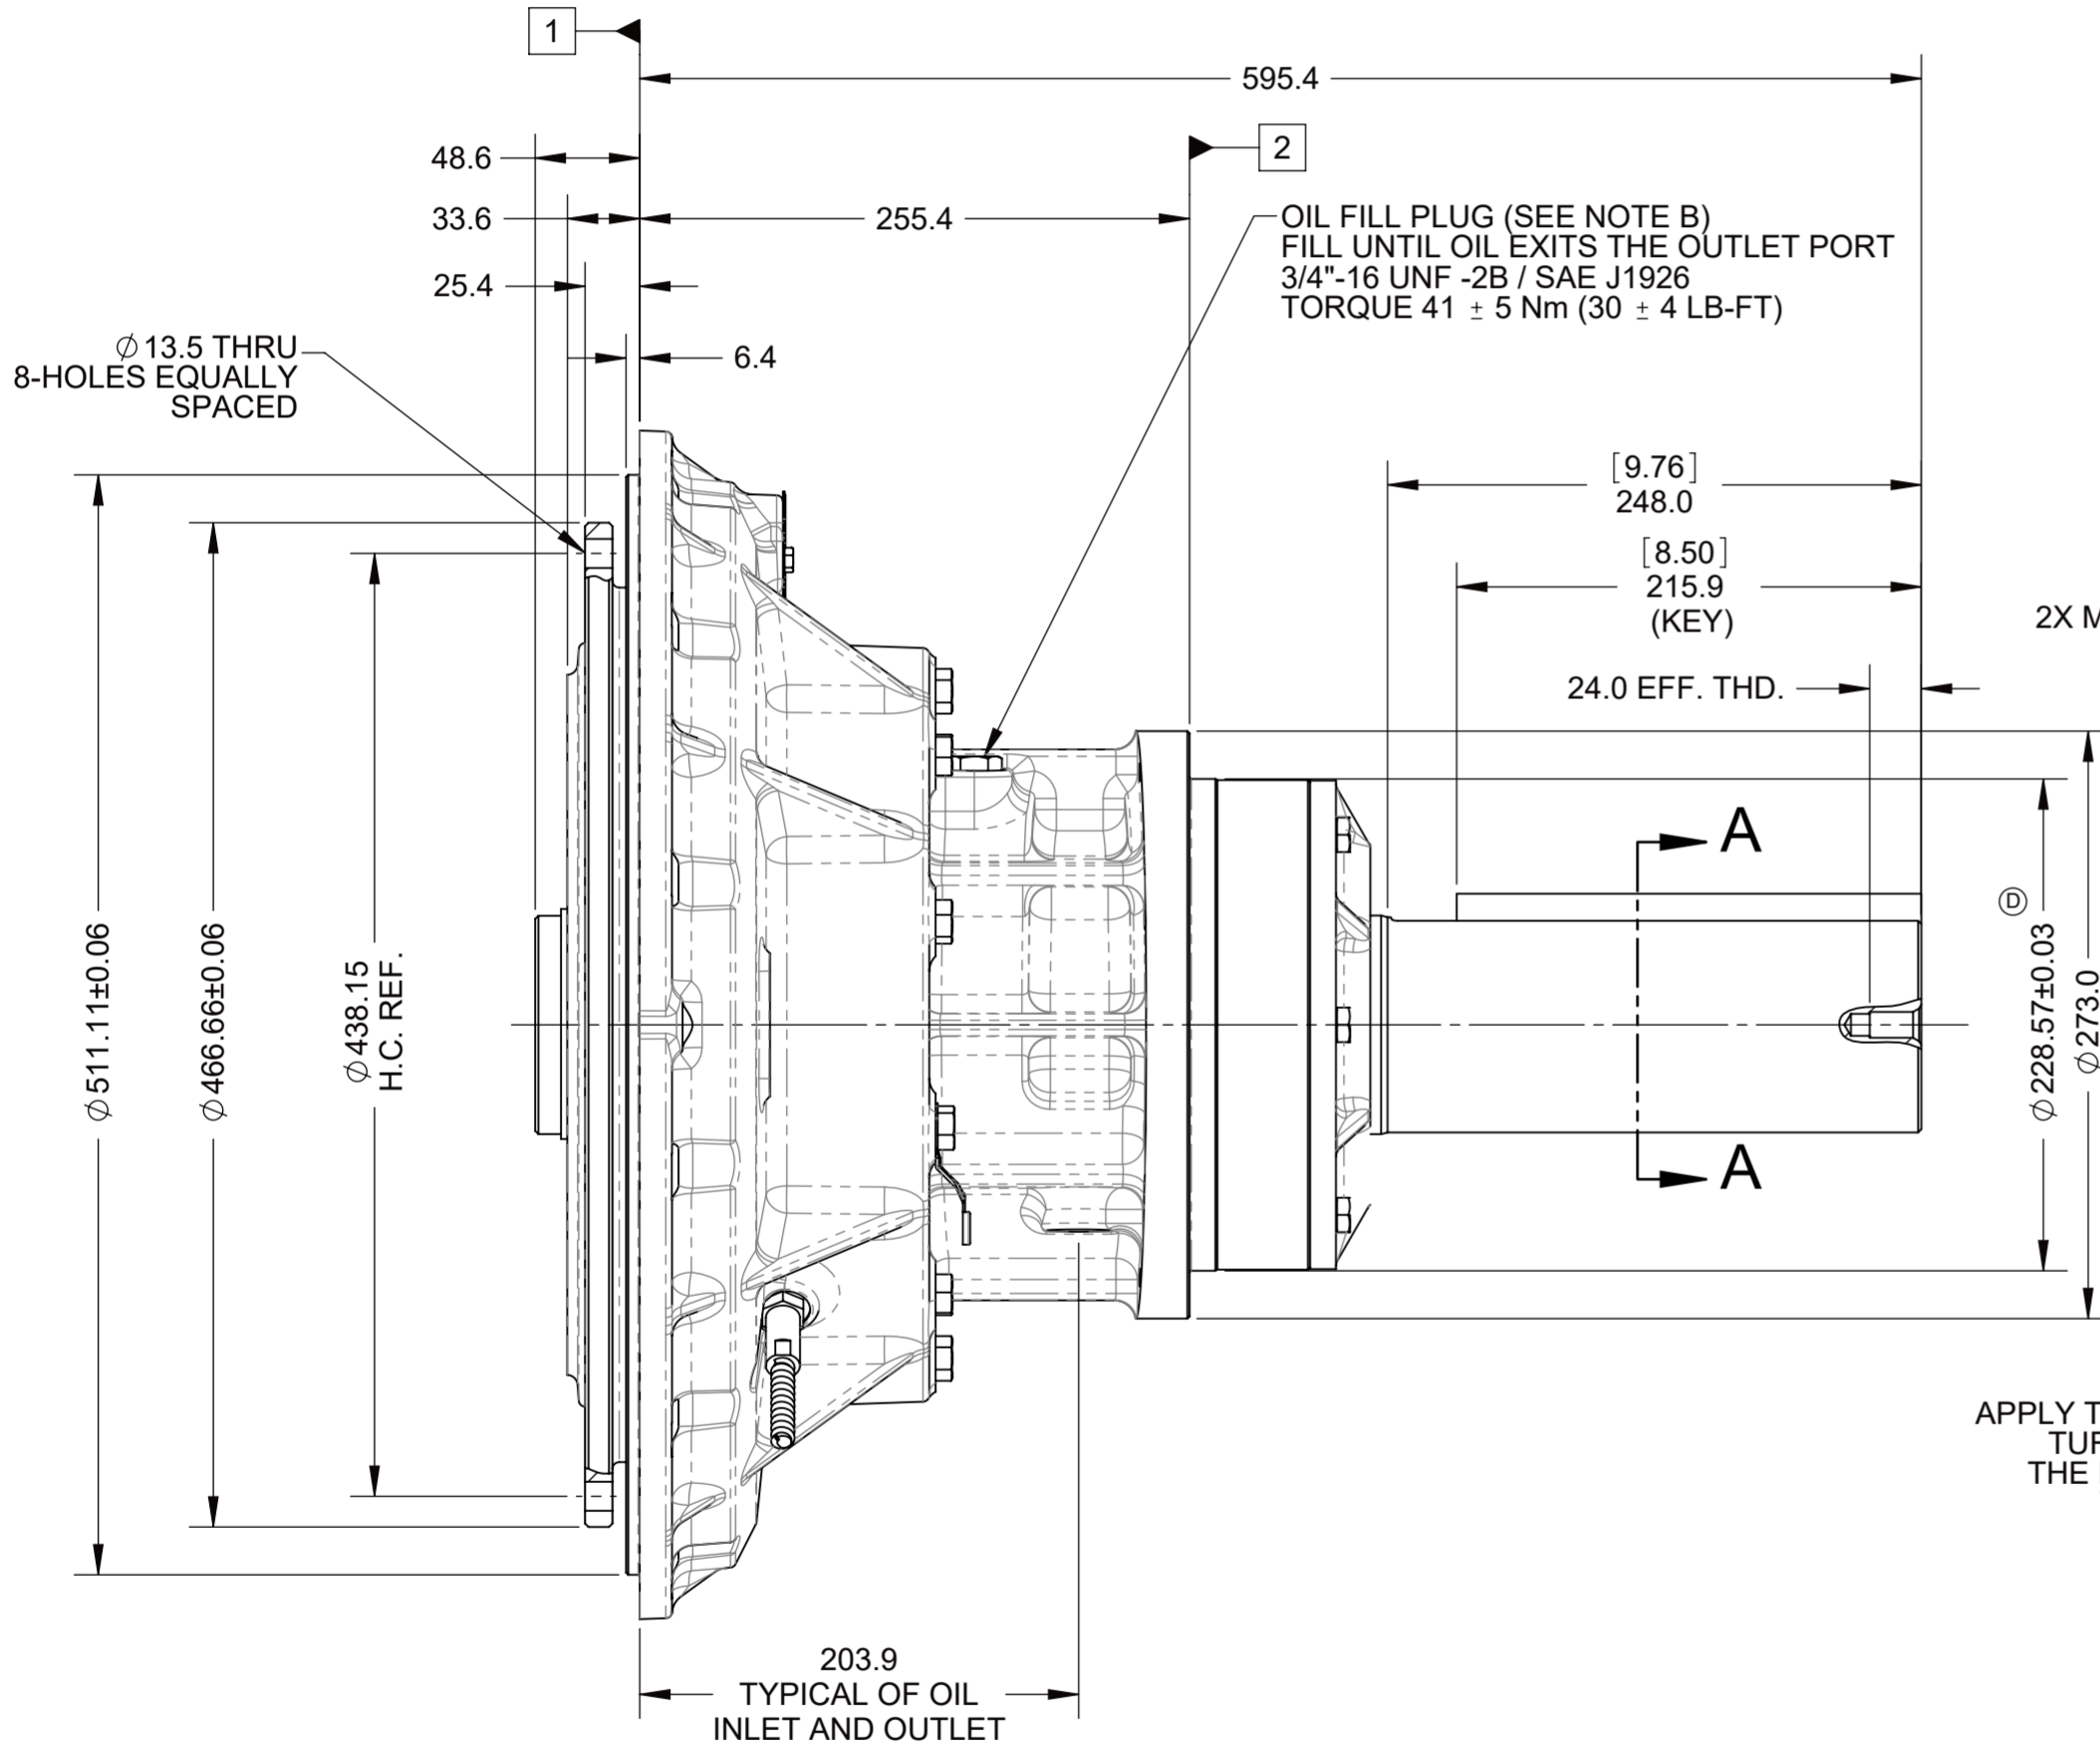

TEST PORTS						
SYMBOL	DESCRIPTION	PORT/ STANDARD	DESCRIPTION	TORQUE	CLEARANCE FOR REMOVAL (mm)	ELECTRICAL CONNECTION
Q <sub>D</sub>	FLOW TO SUMP	3/4"-16 UNF-2B / SAE J1926	O-RING PORT	41 ± 5 Nm (30 ± 4 LB-FT)	15	-
Q <sub>Z</sub>	FLOW TO CLUTCH	3/4"-16 UNF-2B / SAE J1926	O-RING PORT	41 ± 5 Nm (30 ± 4 LB-FT)	15	-
S <sub>I</sub>	INPUT SPEED SENSOR (59 PULSES PER REV.)	5/8"-18 UNF- 2A	-	24.4 ± 2.7 Nm (18 ± 2 LB-FT)	-	DEUTSCH DT04-3P
S <sub>O</sub>	OUTPUT SPEED SENSOR (30 PULSES PER REV.)	5/8"-18 UNF- 2A	-	24.4 ± 2.7 Nm (18 ± 2 LB-FT)	-	DEUTSCH DT04-3P

[illegible]